


SW3000 – Use and maintenance

ATTENTION! Do not use the machine before you have read and understood the Instructions for use manual



1. Disconnect the battery charger and store the cable.

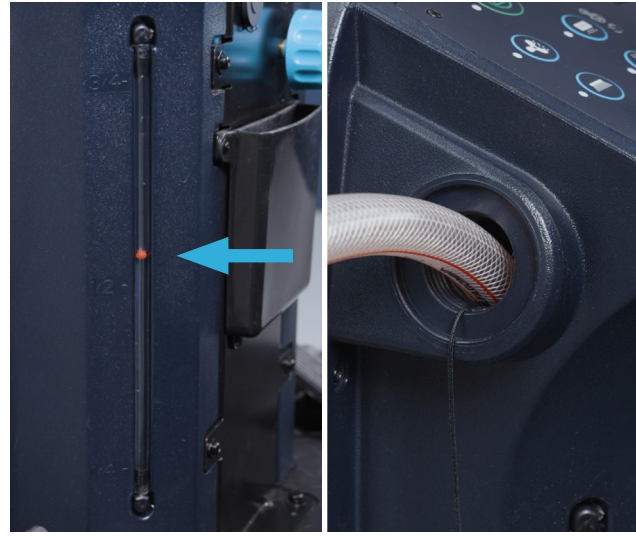

2. Check the solution level on the side of the machine. Add fresh water as needed by removing the blue cap on the fill port.



3. Ensure the main broom and side brooms are properly installed.



4. Adjust the seat to a comfortable working position.




5. Press the start button.



6. Input the user PIN code and confirm.



7. Press the start button to activate cleaning functions.

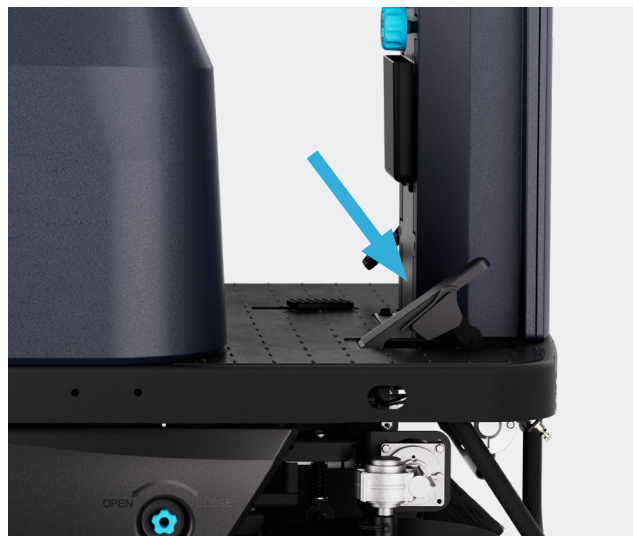

8. The brushes and vacuum will start when the drive pedal is pressed, start sweeping.



9. Turn the speed knob to adjust and set maximum speed with full pressed drive pedal.



10. Adjust the speed of the side brooms by changing the side broom speed knob.




11. Turn DustGuard™ on and off as needed. DustGuard™ provides a light water mist to reduce airborne dust.



12. Press the front flap pedal to open the front flap for sweeping larger debris.



13. Use the filter shaker as needed. Press and hold to automatically activate every 10 minutes

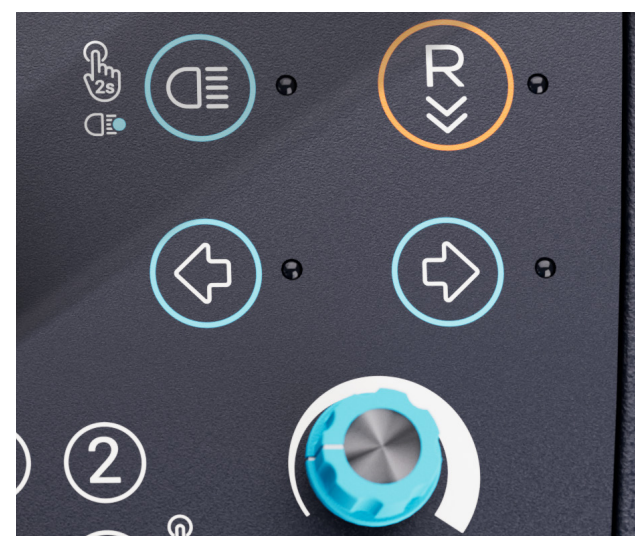

14. Use the turning signals when turning, right/left lights located only in the rear.



15. Press the reverse button to move the sweeper backwards. Machine does not sweep in reverse.



16. Press the side broom button to lift the side brooms and use the machine with only main broom.



17. Turn the dust fan on and off as needed or when sweeping minor wet debris.



18. Press the OneTouch™ button to stop all functions. Slowly release the hopper locking mechanism as it may be heavy. Use the handle to remove and empty the hopper.



19. Remove the rear filter panel to check the filter, reinstall panel and hopper.



20. Remove, clean and inspect the main broom and check the side brooms. Clean the machine with a wet cloth.



21. Charge the machine using the rear charging connection. It has two connections, one for external charger and one if on-board charger is installed.

SW3000 – Troubleshooting

ATTENTION! Do not use the machine before you have read and understood the Instructions for use manual


The machine doesn't work as it should.




1. Check if the battery is charged.
2. Check if the emergency stop button is activated.



3. Check if the main battery connector is properly connected.

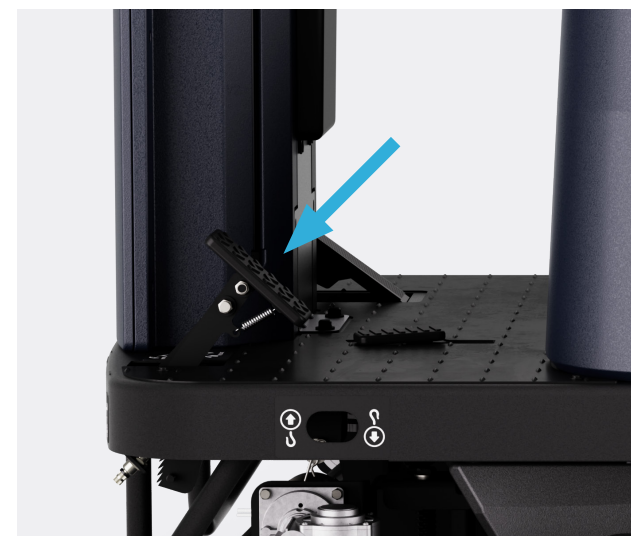

4. Check if the parking brake pedal is engaged.

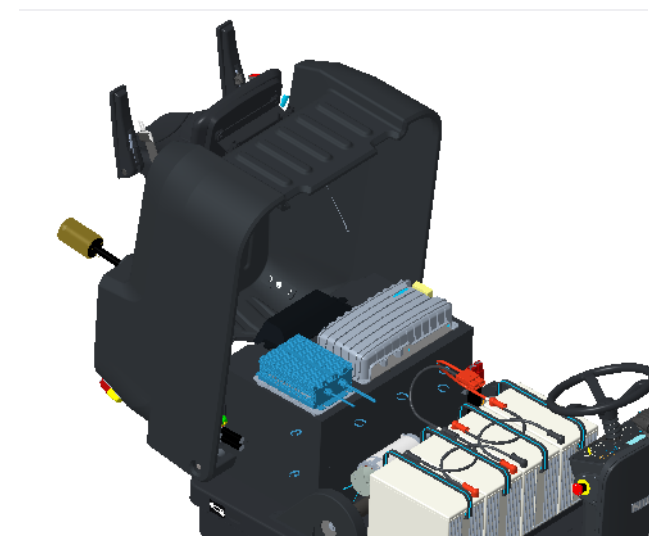

5. Open machine cover and disconnect the battery cable - check so no fuses have tripped.

The machine doesn't contain the dust.



1. Check if all blades are correctly adjusted and not damaged.



2. Check if the vacuum system is switched on.



3. Clean the panel filter by pressing the filter shaker button.



4. Check to see if the debris hopper is full or the hopper gasket is damage.



5. Disconnect the battery cable and check the vacuum and filter shaker circuit breakers.

The machine doesn't sweep.



1. Inspect the main broom, make sure it's turning and is not worn out. Adjust broom pressure by the blue knob on the steering column if needed.



2. Adjust the side broom if needed, replace the side broom if bristles are worn out.



3. Clean or replace DustGuard™ nozzle if blocked.